



Lite FX Rotating Big Ball of Lite Model 1929 Ball Disassembly

This guide will help you disassemble the ball from the bottom of the device in a Lite FX Rotating Big Ball of Lite Model 1929.

Written By: Courtney Elliott



INTRODUCTION

Is something wrong with your disco ball and you need to remove the ball to get to the other parts of your device? This guide will show you how so you can return to the party!



TOOLS:

- [Spudger](#) (1)
-


Step 1 — Ball



⚠ Unplug the device to avoid injury.

- Turn the device over, so that the base is on top.

Step 2

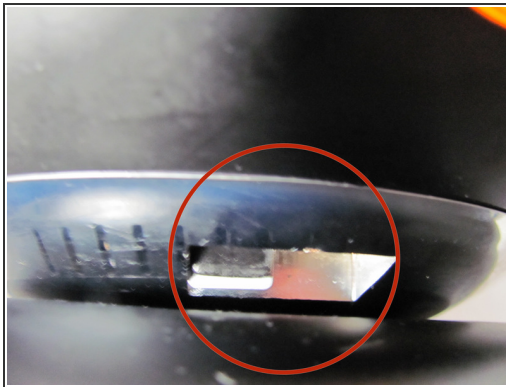

- Compress the tab by pushing towards the center of the device with a spudger or flathead screwdriver.
- While compressing the tab, peel the base away from the rotating head.

Step 3



- If the metal brackets come off of the sphere, put them back on the plastic piece as shown in the photo.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-26 04:50:33 PM.